

Ship Mode

Disables multiple electrical components to minimize battery drain during shipping and storage. For more detail on which features are disabled, See ship mode feature function chart on page 2. The tell tale that the vehicle is in ship mode is a flashing battery light in the cluster. There is one condition where the battery lamp will be on all of the time in ship mode. See ship mode charging status table on page 3.

Dealer Retail Vehicles

ProMasters shipped to a dealer from the assembly plant will be in ship mode. Starting in 2018 the retail dealer will need to use a scan tool to get the vehicle out of ship mode before delivery to the customer.

Fleet Vehicles

Fleet vehicles are shipped from the assembly plant in ship mode. Fleet vehicles with the appropriate fleet sales code have the ability to be taken out of ship mode by following the procedure listed below, without requiring the use of a dealer scan tool

To reconfigure the Fleet Vehicle to customer mode, follow the instructions below.

- **Key OFF**
- **Headlights OFF**
- **Key ON**
- **Right turn signal ON**
- **Pull multifunction lever all the way to High Beam position (past “flash-to-pass”), and hold for more than 10 seconds.**



Ram ProMaster Ship Mode

Ship Mode Feature Function Chart

Feature	Function		
	Key Off	Key On	Engine Run
Horn	Enable	Enable	Enable
Parking Lights	Disable	Don't Care	Don't Care
Low Beam	Don't Care	Disable	Enable
High Beam	Don't Care	Disable	Disable
Turn Lamps	Don't Care	Enable	Enable
Hazard	Enable	Enable	Enable
DRL (Daytime Running)	Don't Care	Disable	Enable
Roof Lamps	Don't Care	Disable	Enable
Front Fog	Don't Care	Disable	Disable
Rear View Mirror Heater	Don't Care	Disable	Enable
Rear View Mirror Folding	Don't Care	Enable	Enable
License Plate Lamp	Don't Care	Disable	Enable
Front /Rear Ceiling Lamps	Disable	Disable	Disable
Anti Theft Alarm	Disable	Disable	Disable
Power Locks	Enable	Enable	Enable
Power Windows	Don't Care	Enable	Enable
Odometer	Don't Care	Enable	Enable
Clock	Disable	Enable	Enable
Key-In-Ignition Chime	Disable	Disable	Disable
HVAC Temperature Control	Don't Care	Don't Care	Disable
HVAC Blower	Don't Care	Disable	Enable
Air Conditioning	Don't Care	Don't Care	Enable
Heated Rear Window	Don't Care	Disable	Enable
Telematics	Disable	Disable	Disable
Blue Tooth	Disable	Disable	Disable
Radio Receiver	Disable	Disable	Disable
RF Receiver	Disable	Disable	Disable
Power Down Delay at Key Off	Disable	Don't Care	Don't Care

Ram ProMaster Ship Mode

Ship Mode Charging Status Table		
Engine Speed Threshold	Charging Status	Battery Lamp Status
Low	Charging	Flashing
High	Charging	Flashing
Low	Not Charging	Flashing
High	Not Charging	On

Ram ProMaster Ship Mode