

## ProMaster Ship Mode

### Ship Mode

Disables multiple electrical components to minimize battery drain during shipping and storage. For more detail on which features are disabled, See ship mode feature function chart on page 2. The tell tale that the vehicle is in ship mode is a flashing battery light in the cluster. There is one condition where the battery lamp will be on all of the time in ship mode. See ship mode charging status table on page 3.

### Dealer Retail Vehicles

ProMasters shipped to a dealer from the assembly plant will be in ship mode. Starting in 2018 the retail dealer will need to use a scan tool to get the vehicle out of ship mode before delivery to the customer.

### Fleet Vehicles

Fleet vehicles are shipped from the assembly plant in ship mode. Fleet vehicles with the appropriate fleet sales code have the ability to be taken out of ship mode by following the procedure listed below, without requiring the use of a dealer scan tool

**To reconfigure the Fleet Vehicle to customer mode, follow the instructions below.**

- Key OFF
- Headlights OFF
- Key ON
- Right turn signal ON
- Pull multifunction lever all the way to High Beam position (past “flash-to-pass”), and hold for more than 10 seconds.



## ProMaster Ship Mode

| <b>Ship Mode Feature Function Chart</b> |                 |               |                   |
|---|-----------------|---------------|-------------------|
| <b>Feature</b>                          | <b>Function</b> |               |                   |
|   | <b>Key Off</b>  | <b>Key On</b> | <b>Engine Run</b> |
| Horn                                    | Enable          | Enable        | Enable            |
| Parking Lights                          | Disable         | Don't Care    | Don't Care        |
| Low Beam                                | Don't Care      | Disable       | Enable            |
| High Beam                               | Don't Care      | Disable       | Disable           |
| Turn Lamps                              | Don't Care      | Enable        | Enable            |
| Hazard                                  | Enable          | Enable        | Enable            |
| DRL (Daytime Running)                   | Don't Care      | Disable       | Enable            |
| Roof Lamps                              | Don't Care      | Disable       | Enable            |
| Front Fog                               | Don't Care      | Disable       | Disable           |
| Rear View Mirror Heater                 | Don't Care      | Disable       | Enable            |
| Rear View Mirror Folding                | Don't Care      | Enable        | Enable            |
| License Plate Lamp                      | Don't Care      | Disable       | Enable            |
| Front /Rear Ceiling Lamps               | Disable         | Disable       | Disable           |
| Anti Thef Alarm                         | Disable         | Disable       | Disable           |
| Power Locks                             | Enable          | Enable        | Enable            |
| Power Windows                           | Don't Care      | Enable        | Enable            |
| Odometer                                | Don't Care      | Enable        | Enable            |
| Clock                                   | Disable         | Enable        | Enable            |
| Key-In-Ignition Chime                   | Disable         | Disable       | Disable           |
| HVAC Temperature Control                | Don't Care      | Don't Care    | Disable           |
| HVAC Blower                             | Don't Care      | Disable       | Enable            |
| Air Conditioning                        | Don't Care      | Don't Care    | Enable            |
| Heated Rear Window                      | Don't Care      | Disable       | Enable            |
| Telematics                              | Disable         | Disable       | Disable           |
| Blue Tooth                              | Disable         | Disable       | Disable           |
| Radio Receiver                          | Disable         | Disable       | Disable           |
| RF Receiver                             | Disable         | Disable       | Disable           |
| Power Down Delay at Key Off             | Disable         | Don't Care    | Don't Care        |

**ProMaster Ship Mode**

| <b>Ship Mode Charging Status Table</b> |                        |                            |
|--|------------------------|----------------------------|
| <b>Engine Speed Threshold</b>          | <b>Charging Status</b> | <b>Battery Lamp Status</b> |
| Low                                    | Charging               | Flashing                   |
| High                                   | Charging               | Flashing                   |
| Low                                    | Not Charging           | Flashing                   |
| High                                   | Not Charging           | On                         |

**ProMaster Ship Mode**