


CHASSIS CAB PTO PROGRAMMING MENU

Below is the new PTO programming menu contained within the Electronic Vehicle Information Center (EVIC). The EVIC is located between the Speedometer and Tachometer. It is controlled using the buttons on the left hand side of the steering wheel. You will be able to access the PTO functions by scrolling to **Vehicle Settings** on low line vehicles and **Commercial Settings** on high line vehicles. The next screen is the PIN number entry screen. The factory set PIN is 0000. The vehicle will be factory set to stationary single mode with driver adjustable PTO speed. If this is the mode that is needed no change in settings is required.

- For Remote or Mobile Mode, change to the required mode. Note that each mode has its own set of **PTO Parameters**
- If you require a single set speed in **Standard mode**, scroll through the PTO/Standard menu/PTO Parameters to Single Set RPM and set your speed.
- If you require a single set speed in **Remote mode**, scroll through the PTO/Remote menu/PTO Parameters to RPM Preset 1 and set your speed.
- If you require this speed or other settings to be 'locked' so that only approved people can reset the settings. Change the 4 digit PIN code by entering the PIN setup menu. Now only people who have the PIN code can change the settings.
- Once you have the correct modes programmed, you can proceed to the **quick start** menu in the next section to show the correct wires to connect.
- **Note: These settings must be made with the vehicle in the run position but with the engine off.**
- **Note: Ensure that the settings are saved on the menu screen after entry. You can double check by exiting and re-entering the menu to confirm.**



Ram Chassis Cab PTO Programming Menu

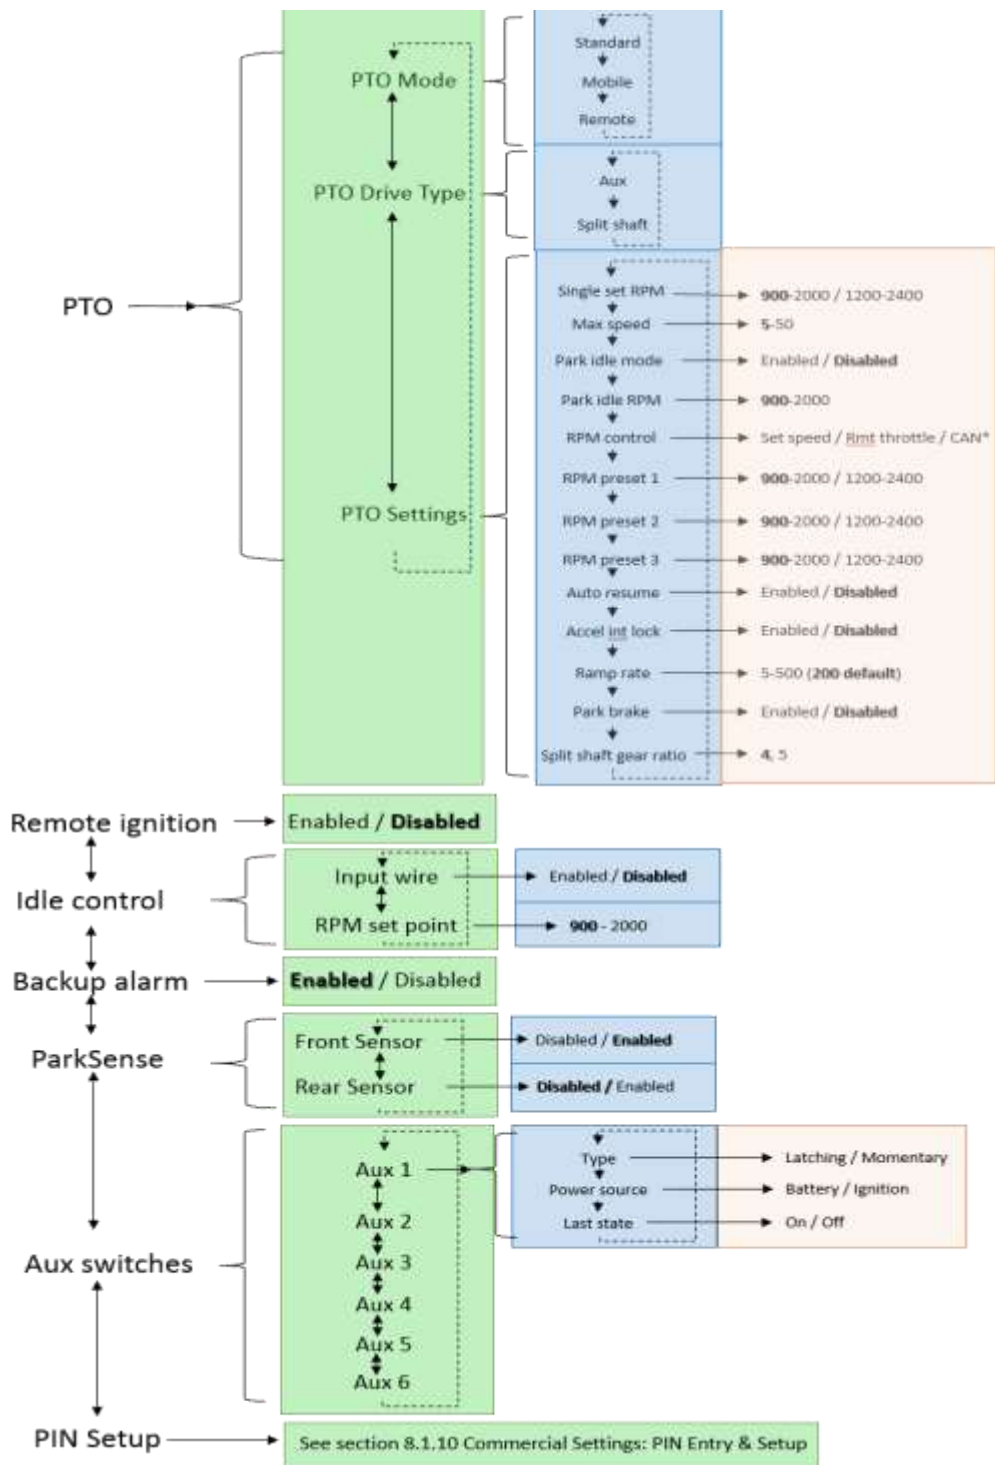

Ram Chassis Cab PTO Programming Menu

PTO	PTO Mode	Standard		
		Mobile		
		Remote		
	PTO Drive Type	AUX		
		Splitshaft		
	PTO Settings	Single Set RPM	900-2000/1200-2400	★
		Max Speed	5-50	★
		Park Idle Mode	enabled/disabled	
		Park Idle RPM	900-2000	★
		RPM Control	Set Speed/Rmt Throttle/J1939	
		RPM Preset 1	900-2000/1200-2400	★
		RPM Preset 2	900-2000/1200-2400	★
		RPM Preset 3	900-2000/1200-2400	★
		Auto Resume	enabled/disabled	
		Accel Int Lock	enabled/disabled	
Ramp Rate		50-500 (200 default)	★	
Park Brake		enabled/disabled		
Gear Ratio	4,5			

Color Coding For PTO Menu
6.7L Cummins Diesel Only
Available only when in standard mode
Available only when in mobile mode
Available only when in remote mode
Available only when in standard or remote mode
Available whenever ignition is in run, engine is off
Available only in splift shaft mode
Available only in AUX drive
Available in standard or remote mode on 6.7 Cummins Only
Bolded values are defaults
RPM range 900-2000 AUX drive, 1200-2400 Split Shaft

Numerical values' details

RPM: 900 to 2000 in steps of 25; 1200 to 2400 in steps of 25

E.g. 900, 925, 950, ... etc.

Speed: 5 to 20 in steps of 1 (e.g. 5, 6, 7,...etc.) and 25, 30, 35, 40, 45 and 50.

Ramp Rate: 50 to 500 in steps of 50 (e.g. 50, 100, 150, ... etc.)

Ram Chassis Cab PTO Programming Menu