

PTO Programming Menu

Below is the new PTO programming menu contained within the Electronic Vehicle Information Center (EVIC). The EVIC is located between the Speedometer and Tachometer. You will be able to access the PTO functions by scrolling to settings/commercial/enter pin 0000/PTO.

- The vehicle will be factory set to stationary single mode with driver adjustable PTO speed. If this is the mode that is needed no change in settings is required.
- The factory (default) pin setting is 0000
- If you require a single set speed in standard mode, scroll through the PTO/Standard menu to Single Set RPM and set your speed.
- If you require this speed or other settings to be 'locked' so that only approved people can reset the settings. Change the 4 digit PIN code by entering the PIN setup menu. Now only people who have the PIN code can change the settings.
- Once you have the correct modes programmed, you can proceed to the quick start menu on the next page.
- Settings must be made with the key in the run position but with the engine off
- **NOTE: You must use remote mode with an aftermarket switch when using Hard Wired Remote Start/Stop**
- **NOTE: The programming buttons may require multiple presses to actuate continue to press the button if the programming does not function on the first or second press.**

