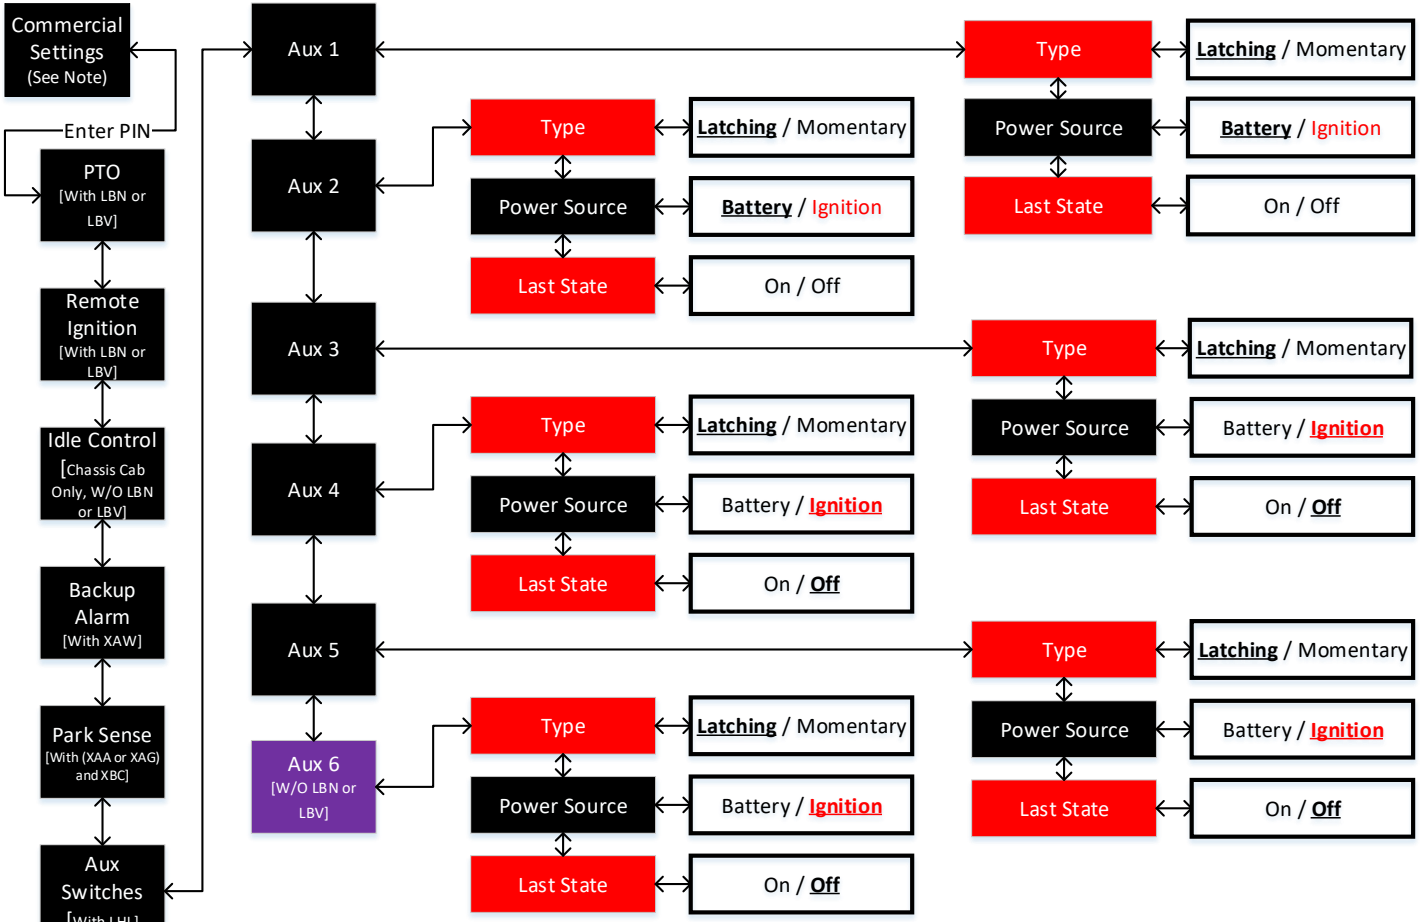

- Default settings in **Bold**
- TYPE and LAST STATE are only displayed when POWER SOURCE = IGNITION
- Displayed settings are correlated to POWER SOURCE by color
- Aux 6 Not Displayed with PTO Prep

- On non-touch screen radios, the COMMERCIAL SETTINGS menu is under the VEHICLE SETTINGS. Otherwise, COMMERCIAL SETTINGS is on the top level.

LBN = RH PTO Prep
LBV = LH PTO Prep
XAW = Back Up Alarm
XAA = Rear Park Sense
XAG = Front & Rear Park Sense
LHL = Aux Switches
BNF = Idle Control/SEEI
XBC = Delete Pickup Box

Aux Switch Programming Menu

All Rights Reserved